



# SILVERTEX™



ISO 9001-2000 CERTIFIED

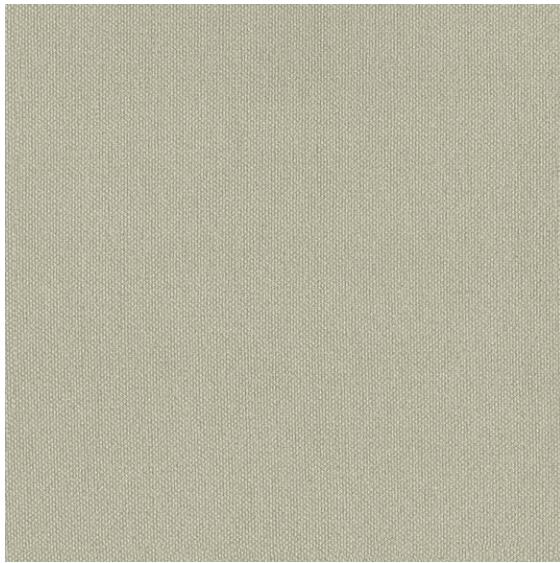


70 Sagebrush

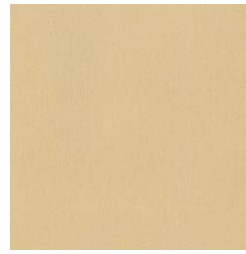


71 Champagne




72 Khaki

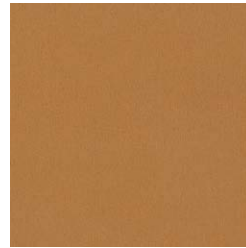


73 Chestnut

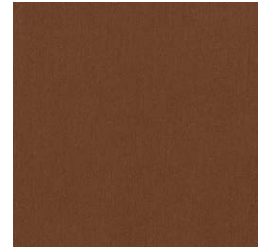

74 Luggage

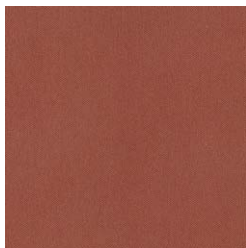

75 Umber

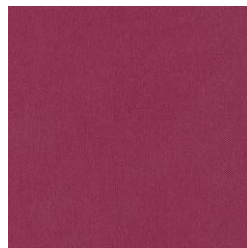

76 Raspberry



77 Meteor



78 Carbon



79 Marine Blue




80 Sapphire



81 Jet




82 Storm

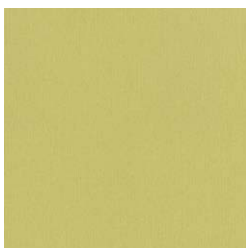

83 Celery



84 Basil

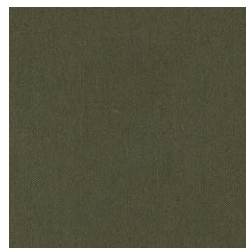

85 Bottle



Silvertex™ is treated with SILVERGUARD® Silver Ion Technology, which provides a natural bacteria-fighting defense that inhibits odor and stain causing bacteria. When combined with PERMABLOK®<sup>3</sup>, Spradling's patented stain-fighting and abrasion-resistant treatment, also featured in Silvertex, SILVERGUARD® delivers the ultimate performance solution.

# SILVERTEX™

## Content

Vinyl | Urethane Topcoat

## Backing

Hi-Loft™

100% Polyester

## Finishes and Treatments



Superior Abrasion

CFFA 1a, ASTM D-4157  
100,000 cycles, Wyzenbeek #8 Cotton Duck

Antifungal Protection

Antibacterial Protection

Antistain Finish

Cold Crack -10° F

Heat Sealable

Mildew Resistant

Sulfide Stain Resistant  
(all colors)

UV Stabilized Pigments

Xenon: AATCC M 16 / NTC 1479  
1000 hours



## Flame Retardancy\*

BIFMA X5.7  
Section 4 - Class I

Boston Fire Code  
Test BFD IX-1

CA Tech 117, Section E

FMVSS 302

Federal Aviation Specification  
FAR 25.853(a) Appendix F, Part 1 (a)(1)(ii)

IMO A.652 (16)  
Annex 1, 8.2 & 8.3

NFP 92503 - M3

NFPA 260 - Class I

Port Authorities of NY & NJ

UFAC - Class I

UNE 23.727 90 - M2

\*This term and any corresponding data refer to the typical performance in the specific tests indicated and should not be construed to imply the behavior of this or any other material under actual fire conditions.

Our vinyl, when tested with suitable component materials, may comply with California Technical Bulletin 133 and Boston Fire Code - Test BFD IX-1.

## Characteristics

Weight: 30 oz.

Width: 54 in.

Roll Size: 30 yd.

## Applications

Corporate Interior

Restaurant

Hotel | Motel

Casino

Healthcare

Sunroom

Marine | RV | Auto

Residential Interior

# PERMABLOK3®

ADVANCED VINYL PROTECTION

## Care and Cleaning Guide

Get rid of stains with one of the following steps:

|             |   |
|-------------|---|
| step 1      | eye shadow, mascara, grease, black felt tip pen, crayon, chocolate, and suntan lotion |
| step 2      | red lipstick  |
| step 3      | blood, urine, feces, oil base paint, tar and asphalt                                  |
| steps 4 & 5 | all other tough stains  |

**Step 1:** Remove excess spill with a damp cloth. Clean with a 1:1 mix of Ivory® liquid soap and water. Next, rinse with clean water and dry.

**Step 2:** Use a straight application of concentrated cleaners such as Formula 409® or Fantastik® spray cleaner. Wipe with a clean cloth, rinse with water, and dry.

**Step 3:** Use a 1:1 mix of ammonia and water, or a 1:4 mix of bleach and water. Rinse with clean water and dry.

**Step 4:** Use a straight application of naphtha (lighter fluid). Rinse thoroughly with clean water and pat surface dry.

**Step 5:** Use a 1:1 mix of isopropyl alcohol and water. If the stain persists, use straight alcohol. Rinse thoroughly with clean water and pat dry.

**Note:** For cleaning that requires step 4 or 5, use a soft cotton cloth saturated with the cleaning material and rub the stain in circles 10 times. Pat dry with another soft cotton cloth and check the results.

©1997 Spradling International, Inc.®

The information published in this care guide refers to the performance of PERMABLOK3® products in specific tests conducted under laboratory conditions. Results may vary under actual conditions.

This information is not a guarantee and does not relieve the user from the responsibility of the proper and safe use of the product and all cleaning agents. The use of certain agents can be harmful to the surface appearance and lifespan of vinyl. Spradling, its agents, and assigns assume no responsibility resulting from the use of such cleaning agents to the vinyl.

Please check compatibility when using this product in combination with painted or varnished surfaces.

Silvertex™ is a trademark of Spradling Holdings, Inc.®

Hi-Loft™ is a trademark of Spradling Holdings, Inc.®

SILVERGUARD® is a registered trademark of Spradling Holdings, Inc.®

PERMABLOK3® is a registered trademark of Spradling Holdings, Inc.®

Ivory® is a registered trademark of Procter and Gamble®

Formula 409® is a registered trademark of The Clorox Company®

Fantastik® is a registered trademark of DowBrands, Inc.®, Registered trademark of the Dow Chemical Co.®

Spradling International is not sponsored by, affiliated with, or endorsed by such trademark owners. Additionally, any use by Spradling International of any third-party trademark does not constitute any endorsement by Spradling International of such third party.



ISO 9001-2000 CERTIFIED

5516 SW 1<sup>st</sup> Lane  
Ocala, FL 34474

800.237.3377

www.wincomfg.com